

BROTHER

Drum Replacement for Brother DR-400/DR-510/DR-350

After replacing the drum unit, with the front cover open, press "Clear".

The display will show:

REPLACE DRUM? 1.YES 2.NO.

Press: 1.YES

The display will show "Accepted".

Close the front cover.