

“No Ink” Level Message Display in HP Printer Models:

Photosmart C7280 Wireless AIO and
Photosmart C6150 All-in-One

ISSUE:

Recycled HP 02 cartridges installed, ink level displays “Out of Ink”.

SOLUTION:

The ink level display is a printer defect, not a cartridge issue.

Reset the printer by unplugging the power cable from the back of printer. Hold down number 9 & # key, plug in the power and turn the printer on. Printer will reset it self. Follow the instruction from printer LCD to complete the start up routine.

This is a one time reset for this printer.